



WALL MOUNTED • OUTDOOR

Wall Pack Edge.

10 and 14 in models • 15 to 120 W



IP65

WARNINGS



RISK OF ELECTRIC SHOCK AND FIRE

- Disconnect the power supply before installing, servicing or removing the fixture.
- Properly ground the fixture and the junction box.



INSTALLATION

- Follow current electrical codes and safety standards (NEC, UL/ETL, ANSI and CSA).
- Use or installation that does not comply voids the warranty.

Before you start

SUGGESTED TOOLS



Drill and bits



Phillips screwdriver



Wire strippers




Wire nuts and tape



Weatherproof silicone

Dimensions and weight

10 IN AND 14 IN MODELS

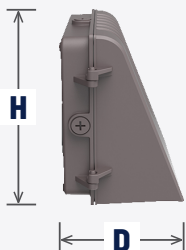

	10 IN	14 IN
Width (W)	10.05 in	14.48 in
Depth (D)	6.26 in	6.44 in
Height (H)	8.86 in	9.25 in
Weight	3.75 lb	5.95 lb

Know your fixture

BOTTOM VIEW



- 1 Integrated 3-in-1 switch**
Power, CCT and photocell, under the side plug.
- 2 Front housing**
Opens with 2 Phillips screws to reach the wires.
- 3 Type III optic**
Full cutoff polycarbonate lens. Always faces down.
- 4 Drain plugs (2)**
Remove them once the fixture is installed.
- 5 3-pin receptacle**
To plug in the Jungo Connect One sensor (JCO-BTS).

Key data

100-277 V~ • 50/60 HZ

VOLTAGE
100-277 V~

POWER
15-120 W

MAX. FLUX
20,400 lm

EFFICACY
176 lm/W

RATING
IP65

OPERATING
-40 to 122 °F

01 - MOUNTING

Set, fix and seal.

Choose the power, CCT and photocell before installing. Then fix the fixture to the wall and seal it. Disconnect the power before you start.

A · Set the function

BEFORE INSTALLING · POWER OFF


1



Remove the plug

Find the switch on the side of the housing and remove the selector switch plug.

2

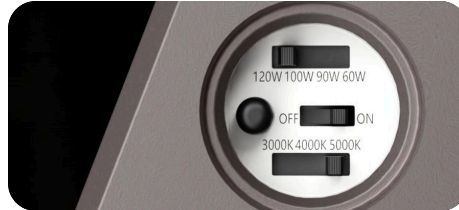

Slide the switches

Choose power, CCT and photocell. Factory default: max power, 5000 K, photocell OFF.

3



Replace the plug

Put the plug back and tighten it to keep water out.

B · Wall installation

LENS FACING DOWN


1



Open the front housing

Loosen the 2 screws and check the junction box size.


2

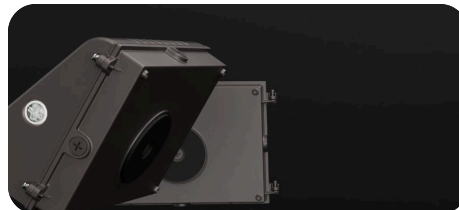

Fix to the wall

Attach the back plate to the junction box or to the wall with lag bolts. The lens faces down.

3

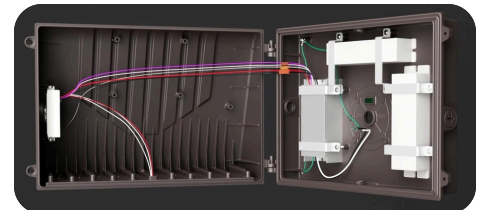

Connect the wires

Green to green, black to black, white to white, with wire nuts. Waterproof the cable inlet.


4



Close the front housing

Tighten the 2 housing screws.

5

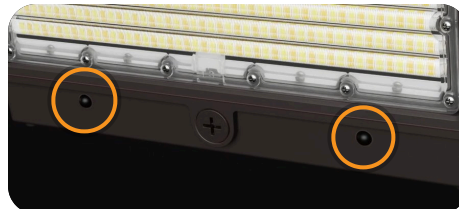

Remove the drain plugs

With the fixture installed, remove the 2 plugs so water cannot build up.

6



Seal with silicone

Apply weatherproof silicone between the wall and the housing.

✓ Switch set and plug tightened

✓ Wires capped

✓ Fixture firm on the wall

✓ Drain plugs removed

✓ Lens facing down

✓ Silicone all around

02 – ELECTRICAL CONNECTION

Identify, connect and insulate.

The fixture runs on 100 to 277 V~, 50/60 Hz. 0–10 V dimming is optional.

Wire identification

Power supply

100–277 V~

BLACK



Line
L

WHITE



Neutral
N

GREEN



Ground
GND

0–10 V dimming

OPTIONAL

PURPLE



DIM +
D+

PINK



DIM –
D-

BLACK/WHITE




+12 V
+12V

Wiring at the fixture

BEFORE ENERGIZING

Power supply


100–277 V~

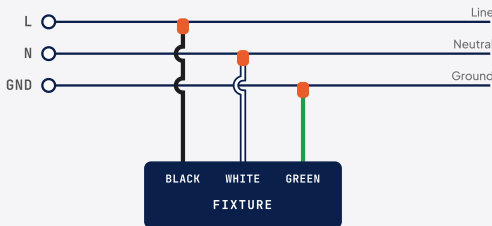

- 1 Black to line.
- 2 White to neutral.
- 3 Green to ground.

0–10 V dimming

OPTIONAL

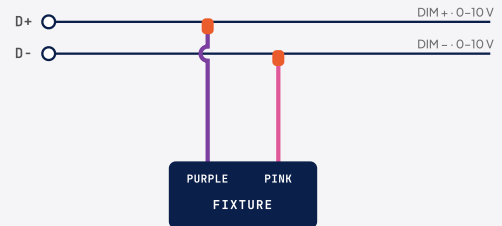

- 1 Purple to DIM +.
- 2 Pink to DIM –.
- 3 Black/white supplies +12 V to power the external 0–10 V controller.

CAUTION De-energize and confirm with a voltage tester before connecting. Insulate every splice with a wire nut and tape. Purple, pink and black/white are for an external 0–10 V controller: if you use Jungo Connect One on the 3-pin receptacle, cap them.

Maintenance and cleaning

WITH THE FIXTURE OFF

- ✓ Let it cool before touching it.
- ✓ Never service it while energized.
- ✓ Clean lens and housing with a non-abrasive glass cleaner.
- ✓ Do not open the fixture or touch the LED chips.

Optional accessories

ORDERED SEPARATELY

Accessory	Code	Use
Jungo Connect One	JCO-BTS	Occupancy and daylight sensor; plugs into the 3-pin receptacle.
Emergency battery	BLD-YM04S-300A	4 W · 10 in · 40 W
	BLD-YM08S-300A	8 W · 10 in · 80 W and 14 in
	BLD-YM15S-300A	15 W · 14 in

03 – SETTINGS AND DATA

Confirm your model.

The integrated 3-in-1 switch changes power, CCT and photocell in the field, without swapping fixtures.

Integrated 3-in-1 switch

FACTORY DEFAULT: MAX POWER • 5000 K • PHOTOCELL OFF

POWER

4 positions

Depends on model (table)

CCT

3 positions

3000 K · 4000 K · 5000 K

PHOTOCELL

ON / OFF

On at dusk (D2D)

DEFAULT

Max · 5000 K

Photocell OFF

Selectable power

176 LM/W • 100-277 V~

Code	Selectable power	Flux up to	Weight
WPE-10-40W	15 · 20 · 30 · 40 W	6,580 lm	3.75 lb
WPE-10-80W	40 · 50 · 60 · 80 W	13,120 lm	3.75 lb
WPE-14-60W	30 · 40 · 50 · 60 W	10,170 lm	5.95 lb
WPE-14-80W	40 · 50 · 60 · 80 W	13,336 lm	5.95 lb
WPE-14-120W	60 · 90 · 100 · 120 W	20,400 lm	5.95 lb

Full code: series – size – package – optional battery (no code, YM04S 4 W, YM08S 8 W, YM15S 15 W) – finish (BRZ, BLK). Example: WPE-14-80W-YM15S-BRZ.

04 – TROUBLESHOOTING

Symptom	Cause	Solution
The fixture does not turn on	Power supply not connected.	Reconnect the power wires.
	Wires connected incorrectly.	Correct the wiring as shown in this guide.
	Voltage outside 100-277 V~.	Use a voltage within range.
The light flickers	Loose or poor connection.	Check or reconnect the wires.
	Input voltage fluctuates widely.	Check the supply voltage.
Stays on during the day	Photocell set to OFF (factory default).	Set the photocell switch to ON.
Does not turn on at night	Photocell covered or 0-10 V dimming at zero.	Uncover the photocell and check the 0-10 V level.
Does not dim with 0-10 V	Purple and pink wires miswired.	Check DIM + and DIM – and the controller.



Questions about the installation?

Our technical team can help. hello@jungo.lighting • +52 (81) 1502 6590
Datasheet at jungo.lighting/en/wall-pack-edge



Jungo Lighting® is a trademark of Jungo Industries, S.A.P.I. de C.V. • Manufactured in Monterrey, N.L., Mexico • Specifications subject to change without notice.