



WALL MOUNTED • OUTDOOR

Wall Pack Industrial®

Rotating head • 60 to 120 W



IP65

WARNINGS



RISK OF ELECTRIC SHOCK AND FIRE

- Disconnect the power supply before installing, servicing or removing the fixture.
- Properly ground the fixture and the junction box.



INSTALLATION

- Follow current electrical codes and safety standards (NEC, UL/ETL, ANSI and CSA).
- Use or installation that does not comply voids the warranty.

Before you start

SUGGESTED TOOLS



Phillips screwdriver



Allen wrench



Wire strippers





Wire nuts and tape



Weatherproof silicone

Dimensions and weight

SINGLE MODEL • 60 TO 120 W

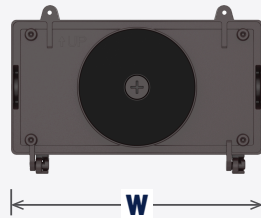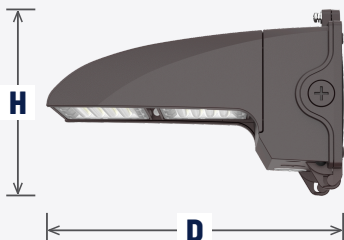

Width (W)	9.4 in
Depth (D)	10.1 in
Height (H)	6.3 in
Weight	4.85 lb
Head	-15° to 210°

Know your fixture

SIDE VIEW



1 Integrated 3-in-1 switch

Power, CCT and photocell, under the selector plug on the bottom of the housing.

2 Rotating LED modules (2)

Rotate from -15° to 210° with an angle scale; locked by 2 hex set screws (Allen wrench).

3 Rear cover

UP arrow, five 1/2 in knockouts and mounting holes.

4 Rear cover screws (2)

Loosen them to swing the front housing open and reach the wires.

Key data

100-277 V~ • 50/60 HZ

VOLTAGE
100-277 V~

POWER
60-120 W

MAX. FLUX
18,573 lm

MAX. EFFICACY
164 lm/W

RATING
IP65

OPERATING
-40 to 113 °F

01 - MOUNTING


Set, fix and seal.

Choose the power, CCT and photocell before installing. Then fix the fixture to the wall, aim the modules and seal it. Disconnect the power before you start.

A · Set the function

BEFORE INSTALLING · POWER OFF


1

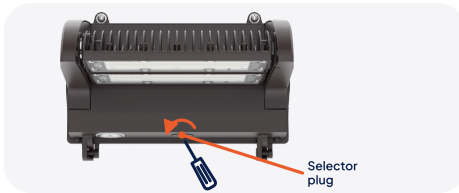

Remove the plug

Remove the selector plug under the housing with a screwdriver.


2

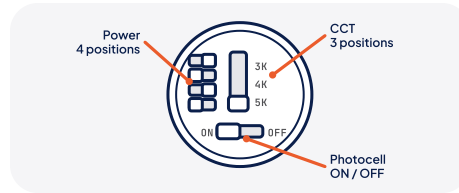

Slide the switches

Choose power, CCT and photocell.
Factory default: max power, 5000 K, photocell OFF.

3

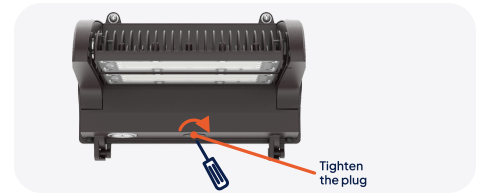

Replace the plug

Put the plug back and tighten it to keep water out.

B · Wall installation

LENS FACING DOWN · UP ARROW ON TOP


1



Open the housing

Loosen the 2 rear cover screws and swing the housing open.


2

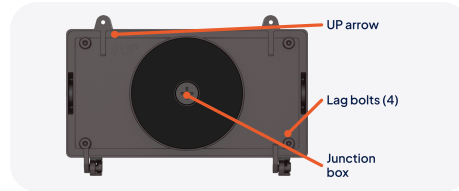

Fix to the wall

UP arrow on top: attach the rear cover to the junction box or wall.

3

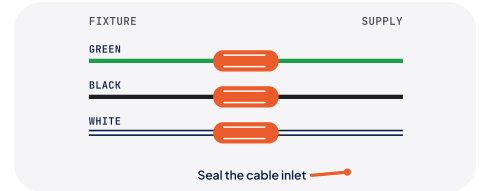

Connect the wires

Green to green, black to black, white to white. Close each pair with a wire nut.


4



Close the housing

Tighten the 2 screws; nothing trapped in the gasket.


5

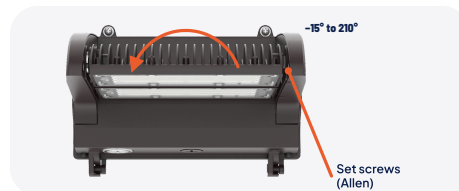

Aim the modules

Loosen the 2 set screws (Allen), rotate the modules, retighten.

6

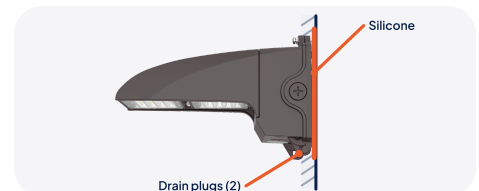

Seal and drain

Seal against the wall and remove the 2 drain plugs.

✓ Switch set and plug tightened

✓ Housing closed

✓ Fixture firm on the wall

✓ Modules aimed

✓ Wires capped

✓ Sealed, drains open

02 – ELECTRICAL CONNECTION

Identify, connect and insulate.

The fixture runs on 100 to 277 V~, 50/60 Hz. 0–10 V dimming is optional.

Wire identification

Power supply

100–277 V~

BLACK



Line
L

WHITE



Neutral
N

GREEN



Ground
GND

0–10 V dimming

OPTIONAL

PURPLE



DIM +
D+

PINK




DIM –
D–

Wiring at the fixture

BEFORE ENERGIZING

Power supply


100–277 V~

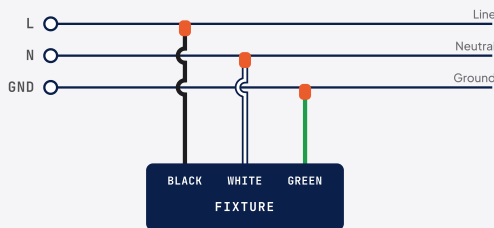

- 1 Black to line.
- 2 White to neutral.
- 3 Green to ground.

0–10 V dimming

OPTIONAL

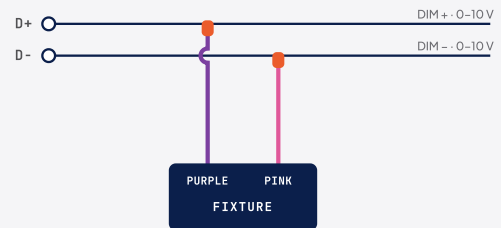

- 1 Purple to DIM +.
- 2 Pink to DIM –.
- 3 If you do not dim, cap each wire end.

CAUTION Splice and insulate every connection with wire nuts and electrical tape. Leave no wires exposed or crossing. Do NOT connect the pink (DIM –) wire to ground. De-energize the circuit and confirm with a voltage tester before connecting.

Maintenance and cleaning

WITH THE FIXTURE OFF

- ✓ Let it cool before touching it.
- ✓ Never service it while energized.
- ✓ Clean lens and housing with a non-abrasive glass cleaner.
- ✓ Do not open the fixture or touch the LED chips.

Optional accessories and versions

ORDERED SEPARATELY

Option	Code	Use
Backup battery 4 W	BLD-YM04S	Option 2 in the code · with battery.
Backup battery 8 W	BLD-YM08S	Option 3 in the code · with battery.
Smart version	Control I	3–pin base for Jungo Connect One (occupancy and daylight).

Included in the box: 4 self-tapping screws and 5 twist-on wire connectors.

03 – SETTINGS AND DATA

Confirm your model.

The integrated 3-in-1 switch changes power, CCT and photocell in the field, without swapping fixtures.

Integrated 3-in-1 switch

FACTORY DEFAULT: MAX POWER • 5000 K • PHOTOCELL OFF

POWER

4 positions

60 · 80 · 100 · 120 W

CCT

3 positions

3000 K · 4000 K · 5000 K

PHOTOCELL

ON / OFF

On at dusk (D2D)

DEFAULT

Max · 5000 K

Photocell OFF

Selectable power

SO MODEL • 100-277 V~

Power	Luminous flux (4000 K)	Efficacy (4000 K)
60 W	9,287 lm	164 lm/W
80 W	12,382 lm	164 lm/W
100 W	15,478 lm	164 lm/W
120 W	18,573 lm	164 lm/W

Full code: series – model – emergency battery (1 none, 2 4 W, 3 8 W) – control (N no sensor, I motion and luminance sensor). Example: WPI-SO-2-I.

04 – TROUBLESHOOTING

Symptom	Cause	Solution
The fixture does not turn on	Power supply not connected.	Reconnect the power wires.
	Wires connected incorrectly.	Correct the wiring as shown in this guide.
	Voltage outside 100-277 V~.	Use a voltage within range.
The light flickers	Loose or poor connection.	Check or reconnect the wires.
	Input voltage fluctuates widely.	Check the supply voltage.
Does not turn on at night	Photocell set to OFF or dimming at zero.	Set the switch to ON and check the 0-10 V level.
Does not dim with 0-10 V	Purple and pink wires miswired.	Check DIM + and DIM – and the controller.



Questions about the installation?

We can help: hello@jungo.lighting · WhatsApp +52 81 1502 6590
Datasheet at jungo.lighting/en/industrial-wall-pack



Jungo Lighting® is a trademark of Jungo Industries, S.A.P.I. de C.V. · Manufactured in Monterrey, N.L., Mexico · Specifications subject to change without notice.